

1 Read all directions before plugging in dispenser.

IMPORTANT: Do not plug in dispenser until step 4.
This guide is a general reference to help you quickly and easily set up your Pure Water Dispenser™ 300e Series. For complete setup, operating and safety instructions, reference the owner's manual.

2 Place dispenser on level floor surface at least 2 inches from wall.



3 Insert bottle and fill dispenser with water PRIOR to plugging in.

Remove tamper-evident seal from plastic bottle cap. (Do NOT remove plastic cap if using a NO-SPILL water bottle.) Load water bottle by lifting and inserting it onto probe. Be sure bottle is fully aligned with dispenser, centered over probe and fingers or other body parts are clear of underside of bottle. Apply slight pressure until plug pushes in and bottle is securely seated. Water will flow into the tank causing air bubbles.



4 Plug in dispenser to a GFCI outlet.

Select and dispense water. Place cup under WATER dispenser nozzle. Press and hold COLD dispenser button until light turns blue. Press and hold WATER dispenser button until water flows continuously.



5 Press and hold HOT dispenser button until light turns red.

Then press and hold WATER dispenser button to purge air from hot tank until water starts to flow from dispenser nozzle. Release WATER dispenser button for 7 seconds. Then press again for water flow and final purge of air from hot tank.



6 Turn on heater switch.

Turn on hot tank heater using switch located on rear of dispenser. Water will become hot in approximately 1 hour. Red light will go off when hot tank reaches operating temperature.

To learn more, visit water.com